Symbologies setting

- Enable	- Disable
* UPC-A on	UPC-A off
* UPC-E on	UPC-E off
* EAN13 on	EAN13 off
* EAN8 on	EAN8 off
* Code39 on	Code39 off
*Codabar on	Codabar off
* Code93 on	Code93 off
* Code128 on	Code128 off
* Interleaved 2of 5 on	Interleaved 2of 5 off
* Industrial 2 of 5 on	Industrial 2 of 5 off
* Matrix 2 of 5 on	Matrix 2 of 5 off
* MSI/Plessey on	MSI/Plessey off
* Code32 on	Code32 off
* Code11 on	Code11 off
* Telepen on	Telepen off
* GS1 DataBar Omnidirectional on	GS1 DataBar Omnidirectional off
* GS1 DataBar Limited on	GS1 DataBar Limited off
* GS1 DataBar Expanded on	GS1 DataBar Expanded off

Factory standard default settings

Items	Default setting
Interface	HID USB
Language (Keyboard)	English
Reading mode	Presentation Mode
Terminator	CR
Code ID	Off
Accuracy	Read 1 time
Enable 1D symbologies	
UPC-A , UPC-E , EAN13 , ENA8 , CODE39 , CODE93 CODABAR , CODE128 , MSI/Plessey , CODE32 CODE11 , TELEPEN , GS1 DataBar Omnidirectional GS1 DataBar Limited , GS1 DataBar Expanded Interleaved 2 of 5 , Industrial 2 of 5 , Matrix 2 of 5	

Check version

BARCODE SCANNER

Quick Start Guide

Version: 3.3


How Do You Program Your Scanner?

1. Scan Start Configuration



Start Configuration

2. Scan all necessary labels to configure the scanner for your application

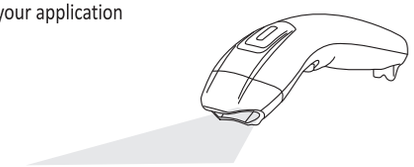

Interface selection
Reading mode
Language ……etc.

3. Scan End Configuration to save the changes.



End Configuration

Resetting The Standard Product Defaults

If you aren't sure what programming options are in your scanner, or you've changed some options and want the factory settings restored, scan the bar code below.

Standard Product Default Setting

Language For Keyboard Interface

Multi-Language Support

* US

Scanning Mode Selection

Good Read Off

Trigger On/off

* Presentation Mode
(only linear imager supported)

Flash/auto power on

Continuous/Trigger off

Continuous/auto power on

Terminator selection- Keyboard & USB

None

* CR

Tab

CR+LF