



Application Note

BIOS update procedure for the Elo[®] Tablet

ESxxxxxx Rev A



Change History

Rev.	Description of Change	Release Date	Changed By
A			

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Disclaimer

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

Trademark Acknowledgments

AccuTouch, CarrollTouch, Elo, Elo (logo), Elo Touch, Elo Touch Solutions, Elo TouchSystems, IntelliTouch, iTouch, SecureTouch, TouchTools and VuPoint are trademarks of Elo and its affiliates. Windows is a trademark of Microsoft Corporation.

Table of Contents

- 1. Introduction5
- 2. Checking the installed BIOS version6
- 3. Updating the BIOS.....7
- 4. Contact Information9

1. Introduction

This procedure covers the steps to update the Elo Tablet's BIOS. The BIOS file may be requested by contacting Elo Technical Support.

Current BIOS update filename: V019ALL.exe

The current BIOS will be listed in InfoAbout (discussed below) as V019

It is strongly recommended that the Tablet/docking station be powered by the external AC to dc power supply during the update. Close all programs before updating the BIOS. The Tablet will reboot when the update is completed.


If you still have questions after reading this document, please contact an Elo Touch technical representative or customer service.

Visit <http://www.elotouch.com/Support/TechnicalSupport/default.asp> for technical support.

Refer to the last page of this user manual for Elo contact information worldwide.

2. Checking the BIOS version

1. Click Start, Control Panel and open the InfoAbout item.

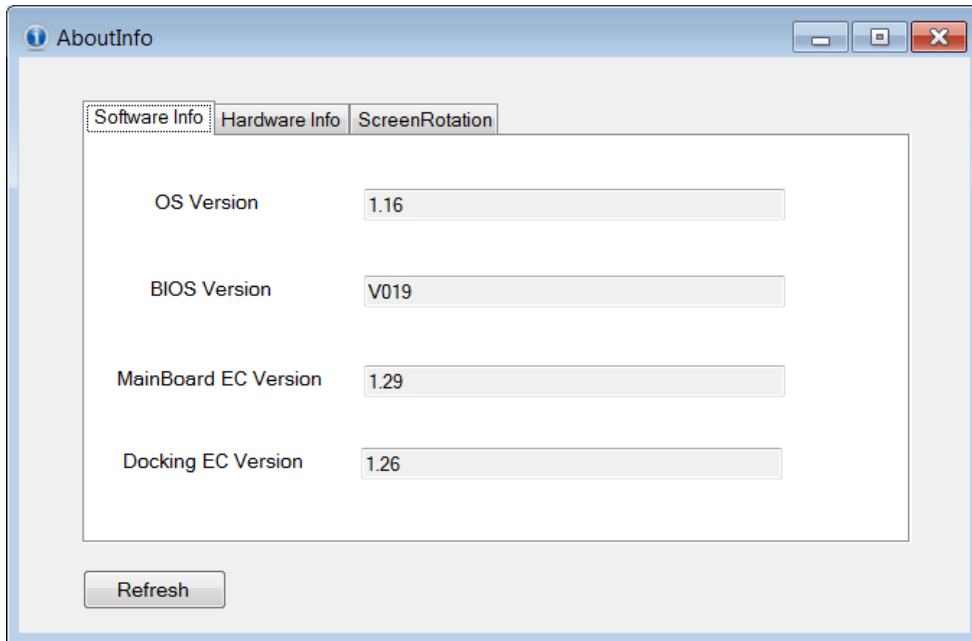


The versions shown above are for example only. If the BIOS version is not as specified in the Introduction section, proceed with the BIOS update.


Separate procedures are available for updating the firmware and installing the operating system image.

3. Updating the BIOS


1. It is strongly recommended that the Tablet/docking station be powered by the external AC to dc power supply during the update. Close all programs before updating the BIOS. The Tablet will reboot when the update is completed.
2. Copy the current BIOS update file (specified in the Introduction section) and paste it onto the Tablet's Desktop.
 - Right-click the file, select Copy
 - Right-click the Tablet's Desktop, select Paste
3. Double-click the file on the Desktop to execute it.
4. When the "Do you want to allow ..." message comes up, click Yes
5. "The current BIOS will be replaced ..." message is displayed, as below: click OK

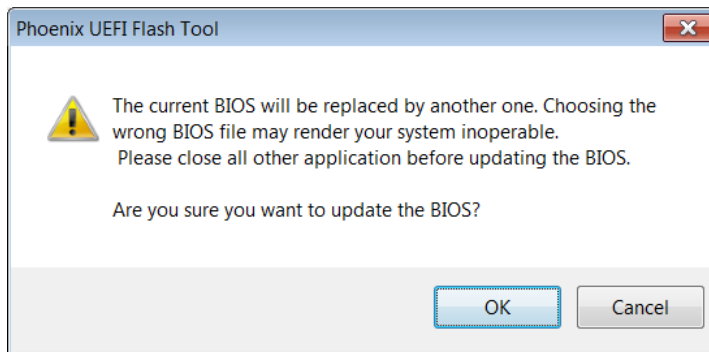

6. The BIOS utility comes up and executes automatically.

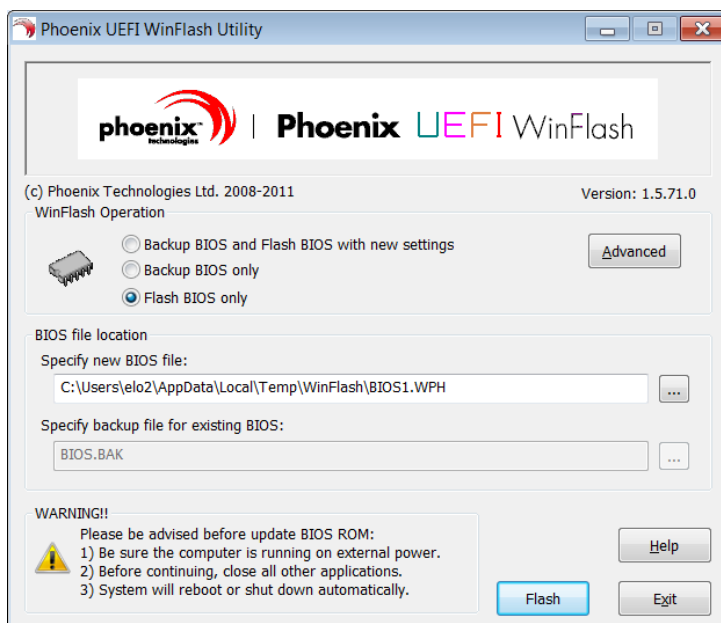

7. Click Exit. Reboot the Tablet if it does not reboot automatically
8. Re-check the firmware version (Control Panel, InfoAbout): *The versions shown below are for example only.* the BIOS version should as specified in the Introduction section.

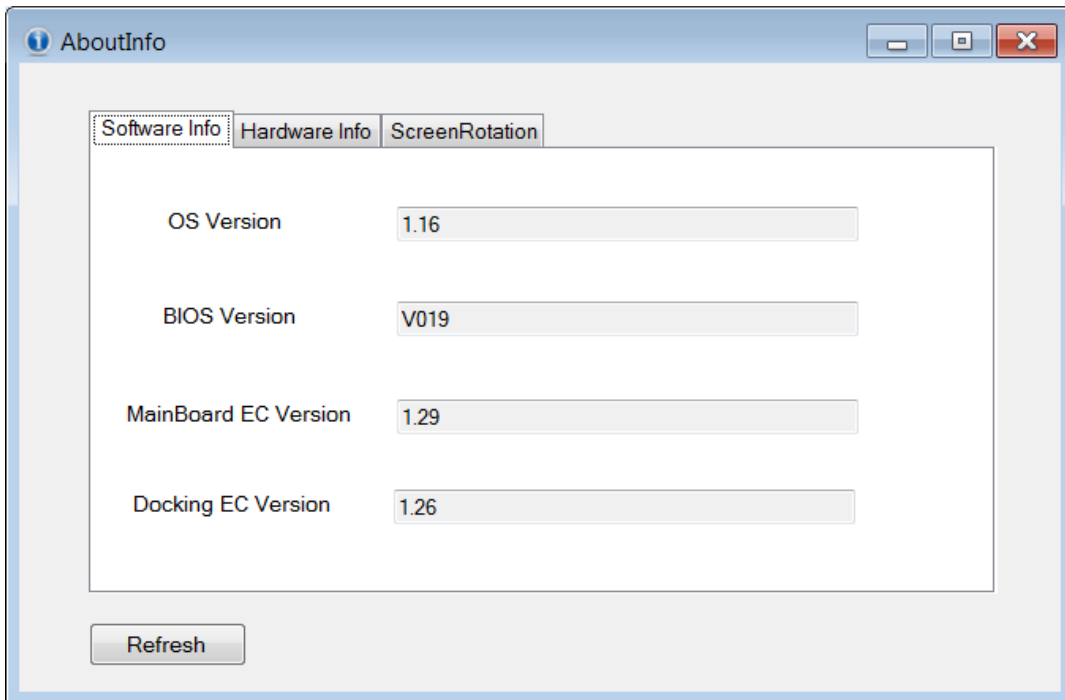

Check out Our Website

www.elotouch.com

Get the latest...

- Product Information
- Specifications
- Upcoming events
- Press releases
- Software drivers

Getting in Touch with us

To find out more about the extensive range of Elo touch solutions, visit our website at www.elotouch.com, or simply call the office nearest you:

North America

Elo Touch Solutions
1033 McCarthy Blvd
Milpitas, CA 95035

Tel 800-ELO-TOUCH

Tel 1-408-597-8000

Fax 1-408-597-8050

customerservice@elotouch.com

Europe

Tel +32 (0) 16 70 45 00

Fax +32 (0) 16 70 45 49

elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 6106 7162

Fax +86 (21) 6485 3981

www.elotouch.com.cn

Latin America

Tel 786-923-0251

Fax 305-931-0124

www.elotouch.com

First Edition (August 2013)

Copyright 2013 Elo Touch Solutions, Inc. All rights reserved.